

companion

EZYWASH Washing Machine Instruction Manual



Part No. COMP412


IMPORTANT

Read these instructions for use carefully. Familiarise yourself with the appliance before use. Keep these instructions for future reference.


Assembly Instructions




1. Assemble 4 piece stand

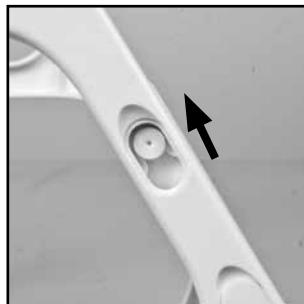


2. Construct frame using support slots & plugs

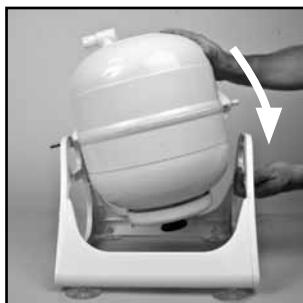

3. Gently place washer into stand frame

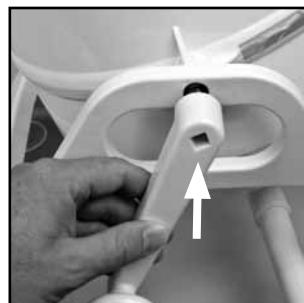

4. Attach handle

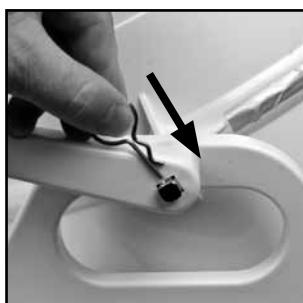

5. Insert handle pin



6. Your washer is ready for use

Washing Instructions

1. Sort the laundry into loads according to material type and/or colours. Note: there are 5 basic load types:

- A. White cottons and linens.
- B. Colourfast cottons and linens.
- C. White synthetics and cotton blends.
- D. Nylons and coloured synthetics.
- E. Delicates.

2. Place the Ezywash on a solid flat surface with easy access to a sink or tub.

3. Add the required amount of water and detergent according to the washing chart on the back page of this manual - for best results and easier rinsing, make sure to add the detergent and water before adding the clothes.


4. Add the laundry.

5. Locate the pressure lid on the top of the Ezywash and turn clockwise about a one eighth turn - until it will not move any further.



6. Tighten the pressure knob on the top of the lid in a clockwise direction until fully tight.


7. Using the handle, turn the Ezywash approximately one turn per second for the recommended time as per the chart on the back page of this manual.

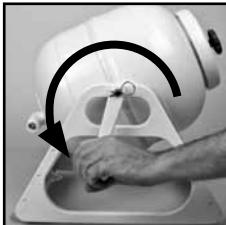

8. After washing, unscrew the pressure lid by turning the knob slowly in an anti-clockwise direction to release the pressure, then remove lid. Do not remove the knob completely.



9. To drain, insert the water release valve at the bottom right of the drum. To do so, push slightly in and turn the valve a quarter turn clockwise, until it clicks into position. Make sure the end of the water release valve is over a sink or basin.

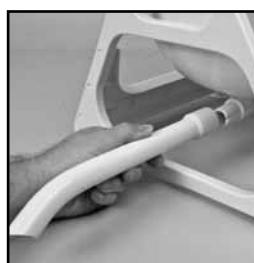

Rinsing

1. After draining the dirty water & removing the water release valve, leave the laundry in the Ezywash and fill with clean cold water. Replace the pressure lid, tighten and turn the machine for about 30 seconds. Drain and wring dry. Repeat if necessary.

companion

Important

- **DO NOT** use boiling water.
- **DO NOT** release the pressure lid on the Ezywash after washing if the unit is still hot.
- **DO NOT** store the machine with the pressure lid tightly fitted.
- **DO NOT** overload the machine.

Identification

1. Handle
2. Pressure Knob
3. Pressure Lid
4. Water Release
5. Mount Frame



Washing chart

Load	% Full	Water	Detergent	Wash time
0.05kg	1/4 load	1.5 litres	1 tablespoon	1 minute
1.0kg	1/2 load	2.5 litres	2 tablespoons	1.25 minutes
1.5kg	3/4 load	4.0 litres	3 tablespoons	1.5 minutes
2.0kg	Full load	5.5 litres	4 tablespoons	2 minutes

Part No.	COMP412
Description	Ezywash Washing Machine
Size	325 x 325 x 420mm
Weight	2.5kg (empty)
Load	2.5kg (max wash load)

Distributed by
PRIMUS AUSTRALIA Pty Ltd
Bundoora Victoria 3083
www.primusaustralia.com.au

Customer Service: 1300 555 197