

Arm-A-Lock


When you need a helping hand!!

Installation & Fitting instructions

Pictures are for illustrative purposes only and may differ from products supplied




Use the supplied gasket to mark the required holes. Make sure you double check distance between the top and bottom mounting brackets before drilling.

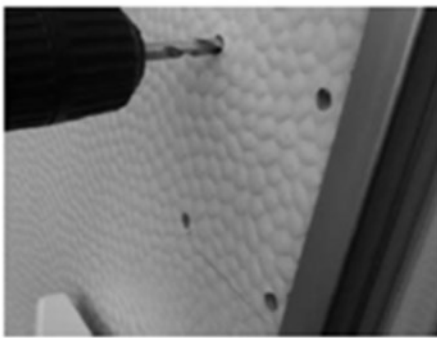

Drill 4 holes for each bracket.




Mount the 2 inside brackets using the pre drilled holes and insert 8 screws.

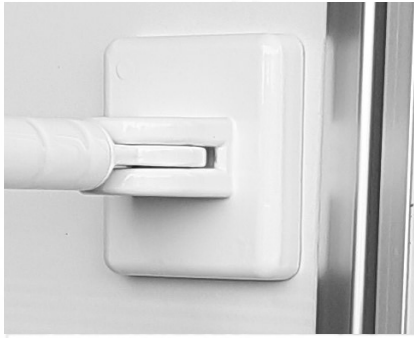



Fit the 2 gaskets supplied, put arm-a-lock into place and then tighten screws from the inside.



Fit the 2 cover plates over the inside mounting plates.

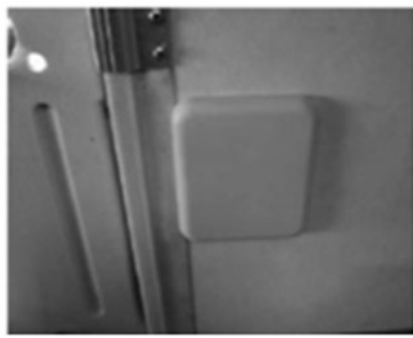


Inside view of mounting cover
Width: 80mm x Height: 95mm

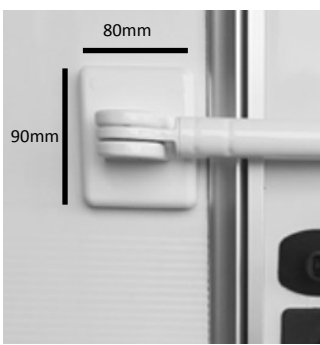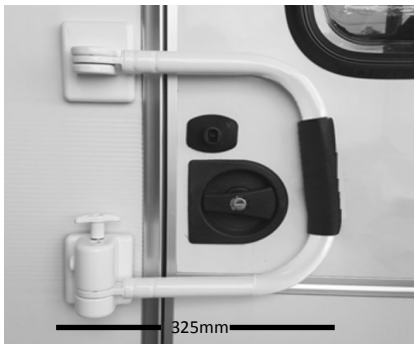

Arm-A-Lock

Inner door mounting kit, requires a minimum of 5mm gap between door and frame.

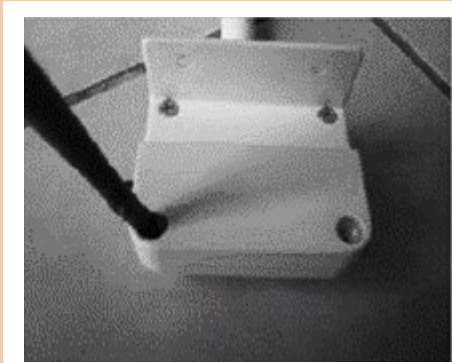

Check placement and screw mounting frame to arm-a-lock.



Apply sealant to frame.



Drill 4 holes as required



Insert 4 screws into the pre drilled holes.



Check position of frame and drill centrally, screw frame in two places for extra support.

Pictures are for illustrative purposes only and may differ from products supplied