

MAWBY HOOK QUICK ACTION TRAILER SAFETY CHAIN COUPLING


Drop forged steel construction.
Suits trailers, caravans etc. to 3.5t ATM

FITTING INSTRUCTIONS

1. Mount shackle onto towbar safety chain coupling point, insert load pin into shackle and retain using a spring pin.
2. Position the hook on the safety chain by selecting a link on the safety chain that keeps the chain as short as possible but allows complete movement of the trailer.
3. Check that the selected chain length allows hook and shackle to be coupled and uncoupled.
4. Mount the hook to the safety chain by inserting the load pin and retain using a spring pin.

INCLUDED

- . Hook
- . Shackle
- . Load Pins
- . Spring Pins

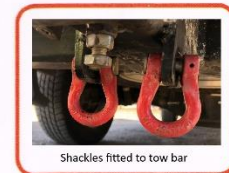

TESTED IN AUSTRALIA TO AS4177.4
CARAVAN AND LIGHT TRAILER
TOWING COMPONENTS
PATENT PENDING

DESIGNED IN AUSTRALIA FOR
AUSTRALIAN CONDITIONS BY

G.J. Dix & Sons Pty Ltd
ABN: 29 071 654 558

DIX
Engineering

www.mawbyhook.com.au

NOT TO BE USED AS A LIFTING DEVICE. ONLY TO BE USED AS A TRAILER SAFETY CHAIN COUPLING.
IF THE VEHICLE IS INVOLVED IN AN ACCIDENT THE HOOK AND SHACKLE MUST BE INSPECTED FOR SIGNS OF DAMAGE.
IF THE HOOK OR SHACKLE ARE FOUND TO BE DAMAGED, REPLACE IMMEDIATELY.