


In-Wall Installation Instructions

(Shower Installation)

The SINKMI\$ER has four ports (on the back), one inlet and three outlets. The inlet port is positioned separate from the other three and is connected from the hot & cold taps or mixer. The other three ports are your output ports and are positioned together on the very bottom of the valve.

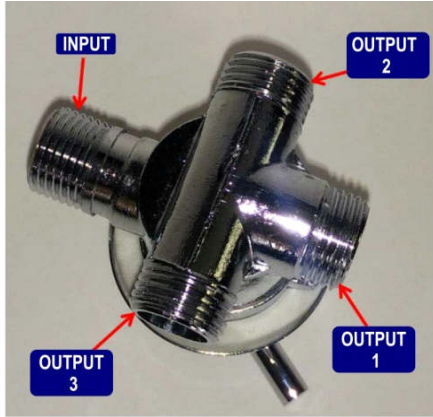

The three outputs are as follows (order can be changed).



- 1) The center port goes straight up to the shower head.
- 2) The right port goes to your return line back to your water tank or inlet (suction) side of water pressure pump.
- 3) The Left port can be capped off or attached to a hand wand, body spray unit, vanity spout, shower attachment or another water tank.

Magic Mushroom installation:

The Magic Mushroom (temperature indicator) can be fitted before the hot inlet to the mixer tap, after the mixer tap or in the return line to the water tank.

Connect to either of the 1/2" sides of the provided clear plastic "T" piece. Use 3-5 turns of Teflon tape. The 3/4" side of the "T" goes through the wall to the front of the shower where the blue mushroom cap (Provided in the kit) is installed as per the instructions below.

- 1) Screw 3/4" Lock Nut onto 3/4" male thread of the "T". Make sure the flat side is facing out toward the end of the threads. Screw it all the way down until it stops.
- 2) Slide Rubber washer over 3/4" threads and press against lock nut.
- 3) Then wrap 2 to 3 turns of Teflon tape on the 3/4" end of the "T".
- 4) Insert "T" into predrilled 1 3/8" hole in shower wall.
- 5) Screw Magic Mushroom onto the 3/4" Thread. Turn Magic Mushroom until snug then turn slightly more until logo is horizontal. **HAND TIGHTEN ONLY!**
- 6) Screw 3/4" Lock nut until snug against the shower wall. **HAND TIGHTEN ONLY!**

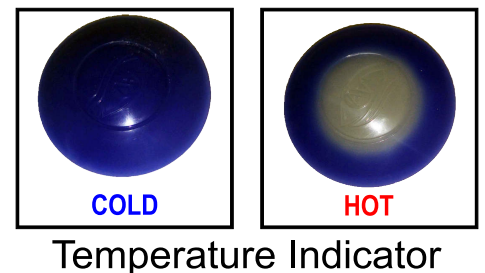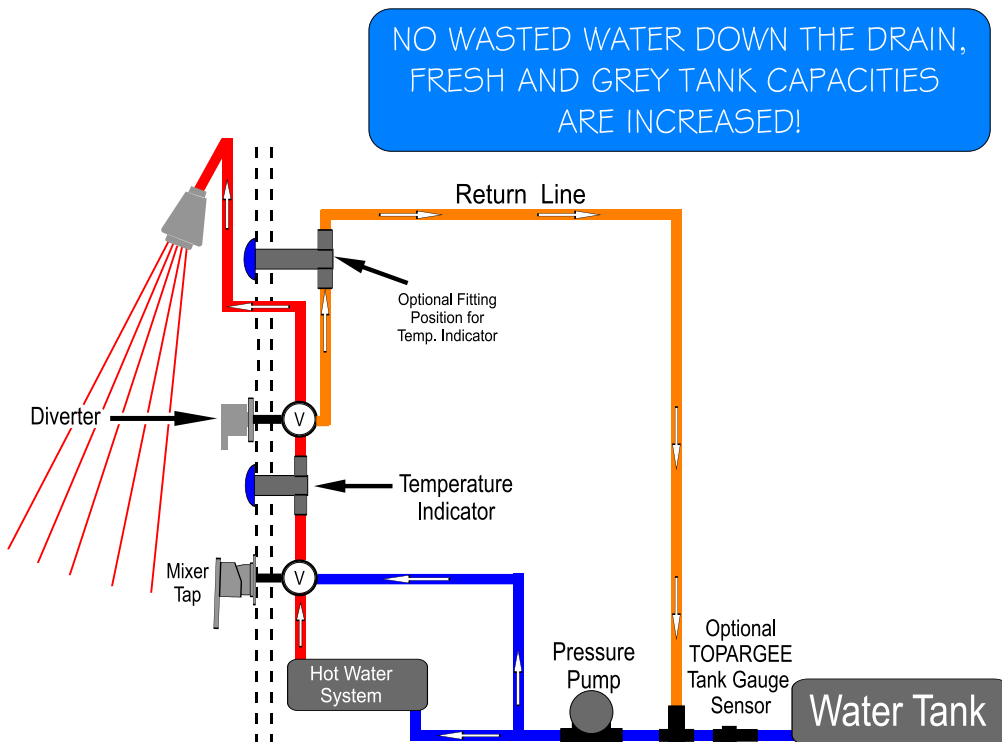

This unit can also be used in sink installations.

For more information please contact your seller or www.topargee.com.au